



VIPP921 SHELF

vipp




Standard brick/concrete rawplugs enclosed

Please make sure to choose rawplugs according to the material on which you want to place the product. Substitute enclosed rawplugs with another type if needed.



Drill size: \varnothing 8mm

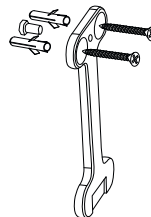

Mounting instructions

①

Drill holes and place rawplugs.

②

Mount, align and level wall brackets.
(The M8 bolt has to be in its hole)

③

Place the shelf and tighten the two
finger screws.

④

Place rubber mats.

